



DdD Retail A/S |



# POS PC Assembly Guide

*If you disassembled your POS PC and need to put it back together,  
this guide will show you where to put which cable*


## Atom or Celeron?

First you need to know which POS PC you have, as the cables look different and need to be placed different.

### How to check which one you have

Hold down the Windows-button  on your keyboard and press the Pause-button  also on your keyboard.

Notice the text marked with yellow on the picture below. If you have an Atom POS PC, please move to the next header named Atom. If you have a Celeron POS PC (the text marked with yellow will say Celeron instead of Atom), please move down to the Celeron header.

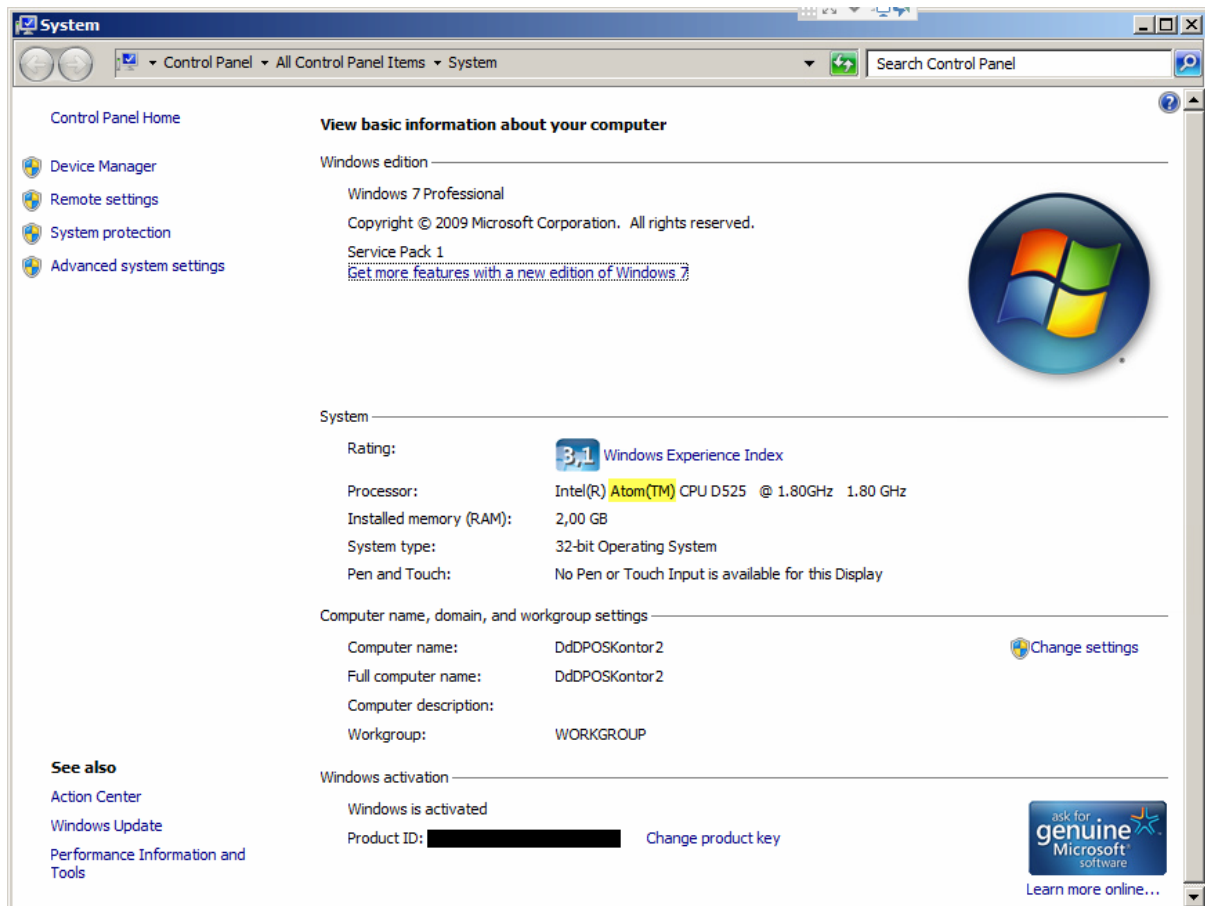

## Atom assembly guide



1 = Sound / Speakers Jack 3.5

2 = Internet RJ45

3 = Scanner and/or USB Card terminal

4 = COM4 - Serial Card terminal or not in use

5 = COM3 - Receipt printer

\*Used for cradle and A4 printer, and if you have other USB devices.

6 = COM2 - Label printer

7 = COM1 - Normally not in use

8 = USB Hub with 4 ports\*

9 = Power cable

## Celeron assembly guide



1 = Power cable

2 = Internet RJ45

3 = Sound / Speakers Jack 3.5

4 = 5 x USB

5 = COM1 - Normally not in use or card terminal

6 = COM2 - Label printer

7 = COM3 - Receipt printer

\*Used for scanner, card terminal, cradle, A4 printer and if you have other USB devices.