Adjusting the sensors in the label printer

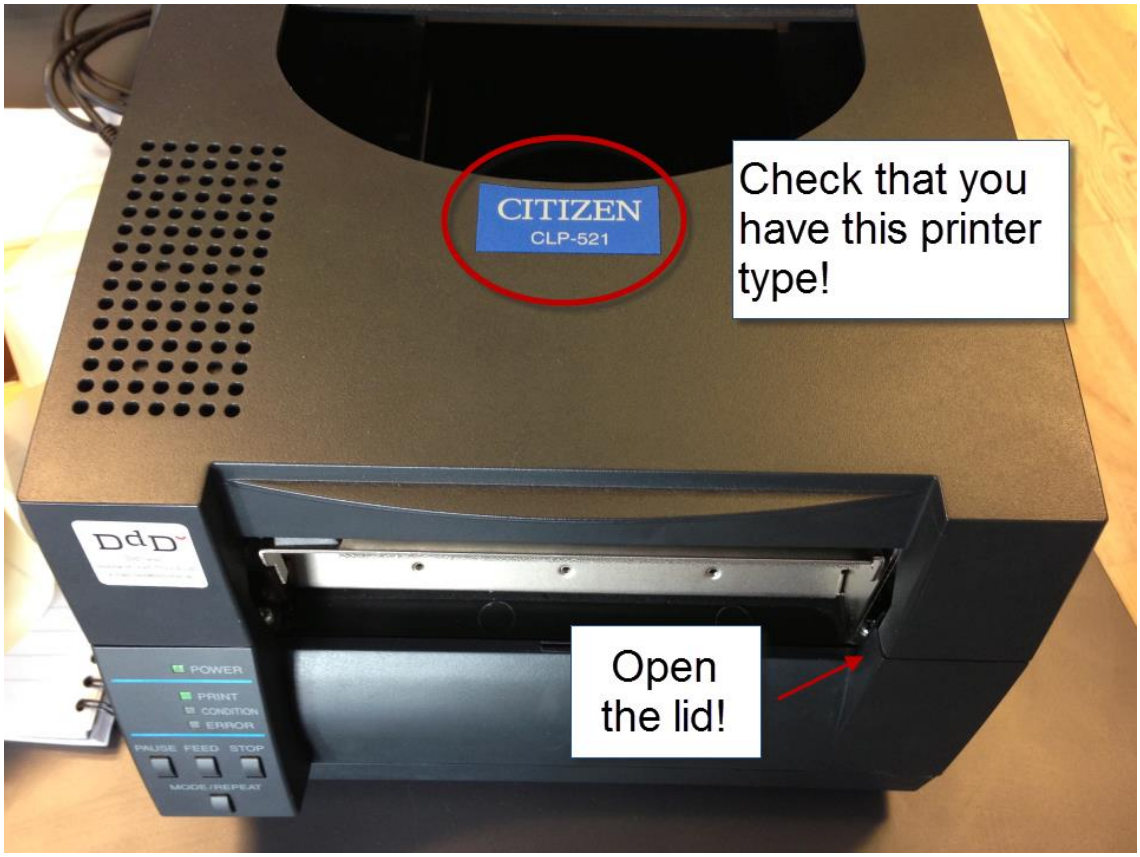

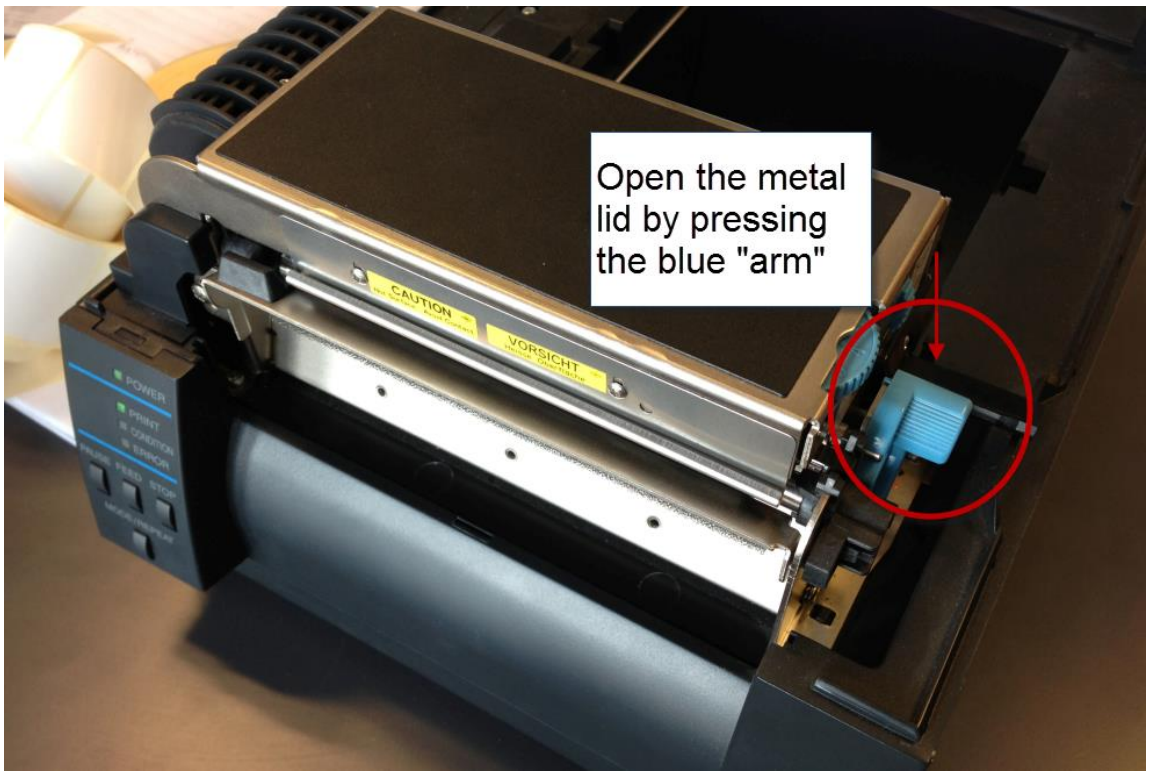

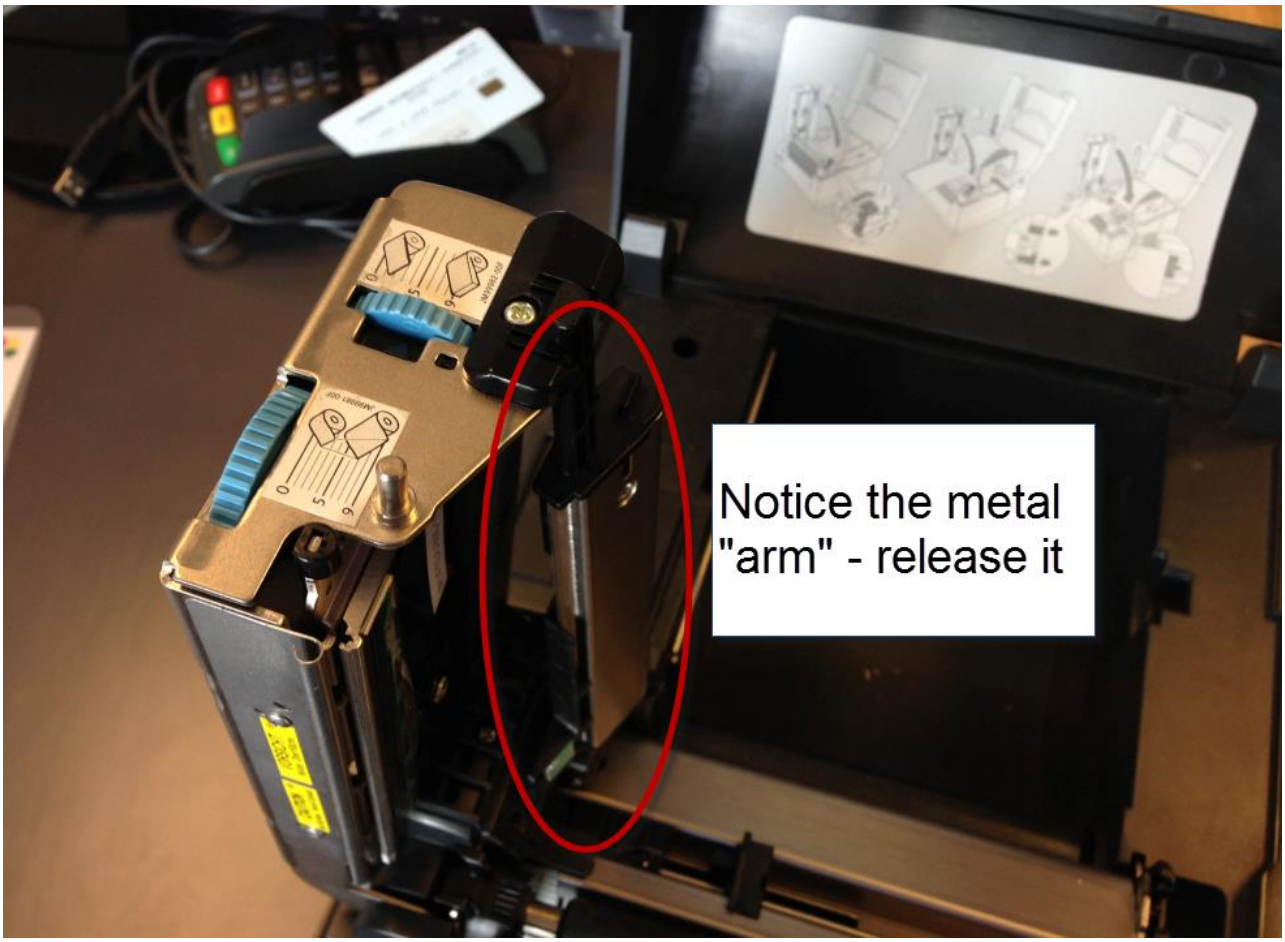
Notice the metal "arm" - release it

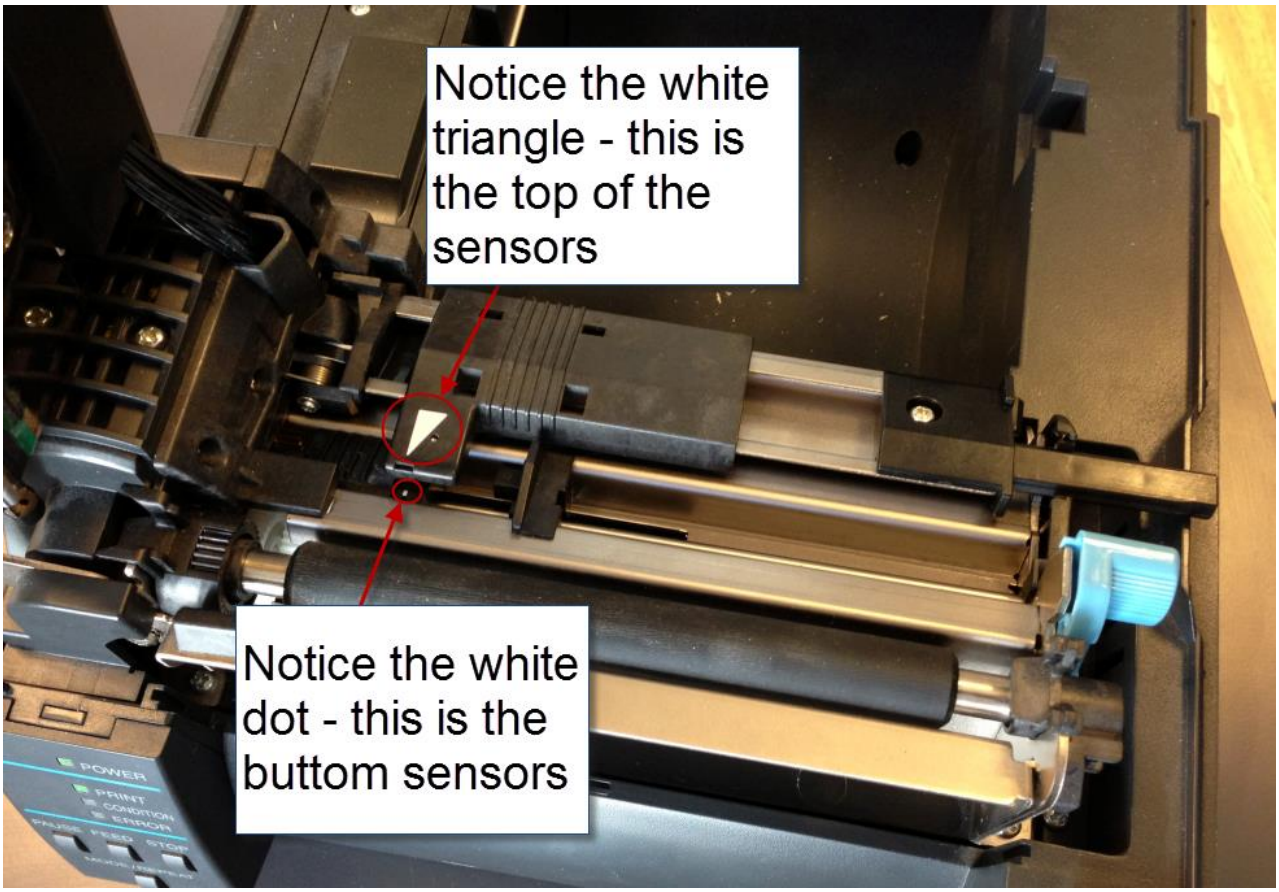
Notice the white triangle - this is the top of the sensors
Notice the white dot - this is the buttom sensors
POWER
PRINT
CONDITION
ERROR

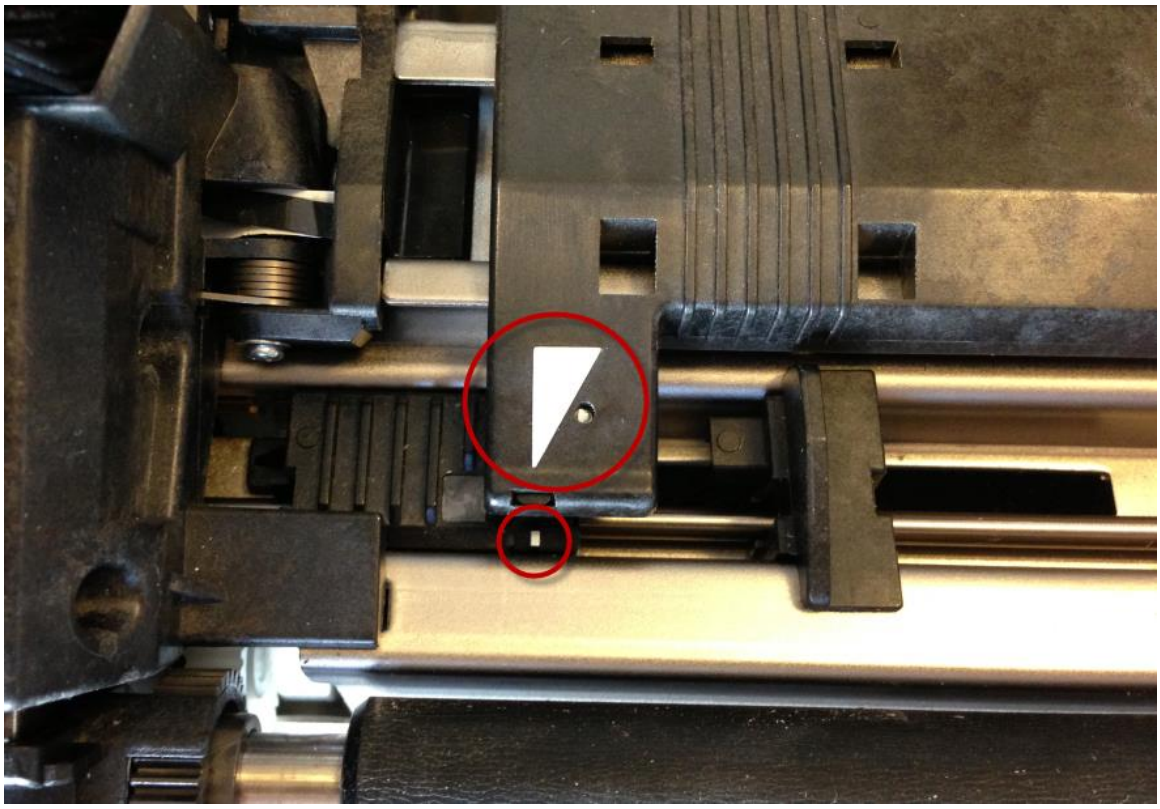

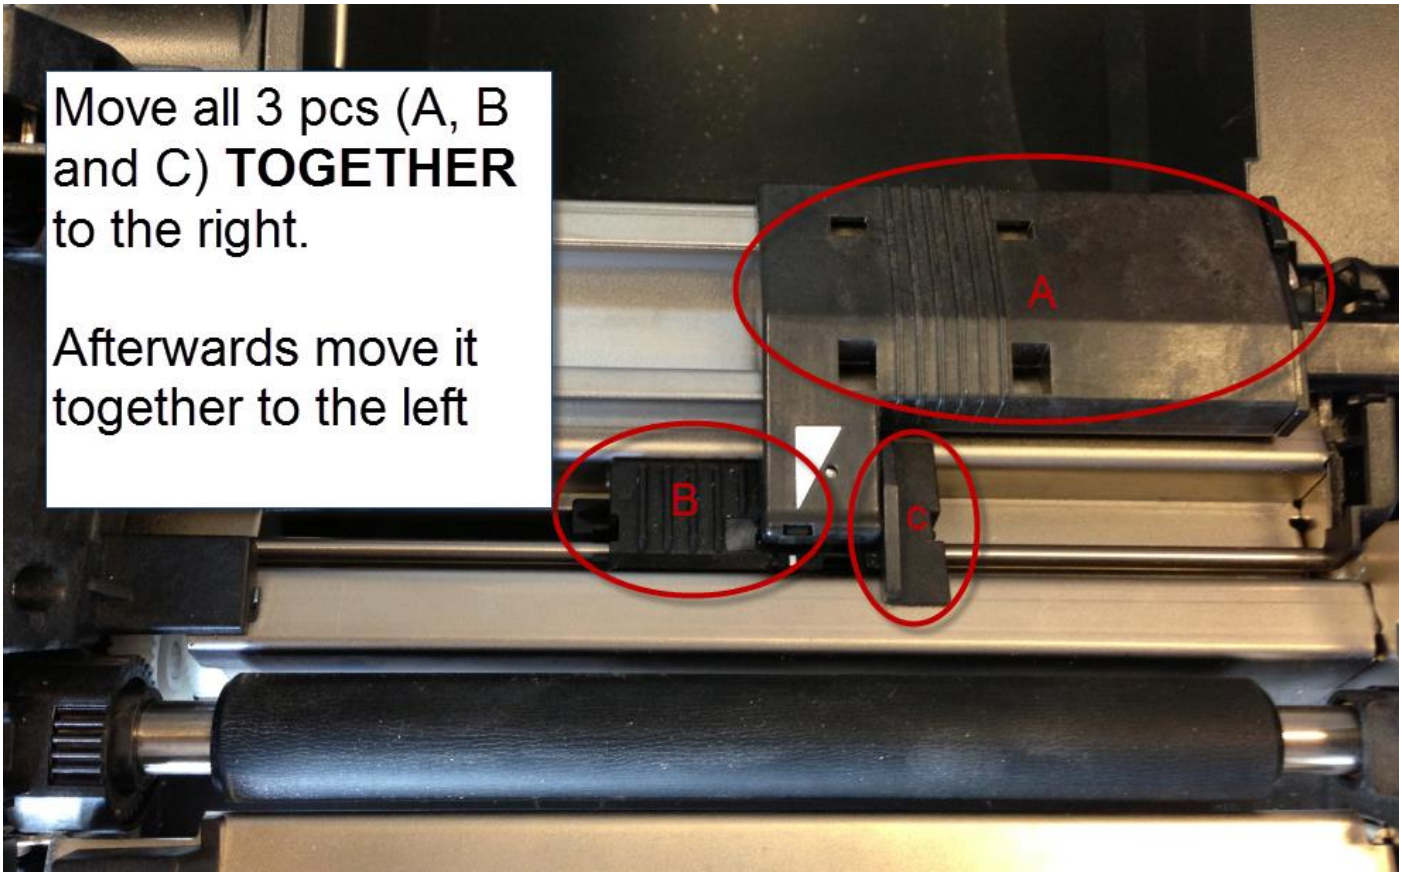
Move all 3 pcs (A, B and C) **TOGETHER** to the right.
Afterwards move it together to the left
A
B
C

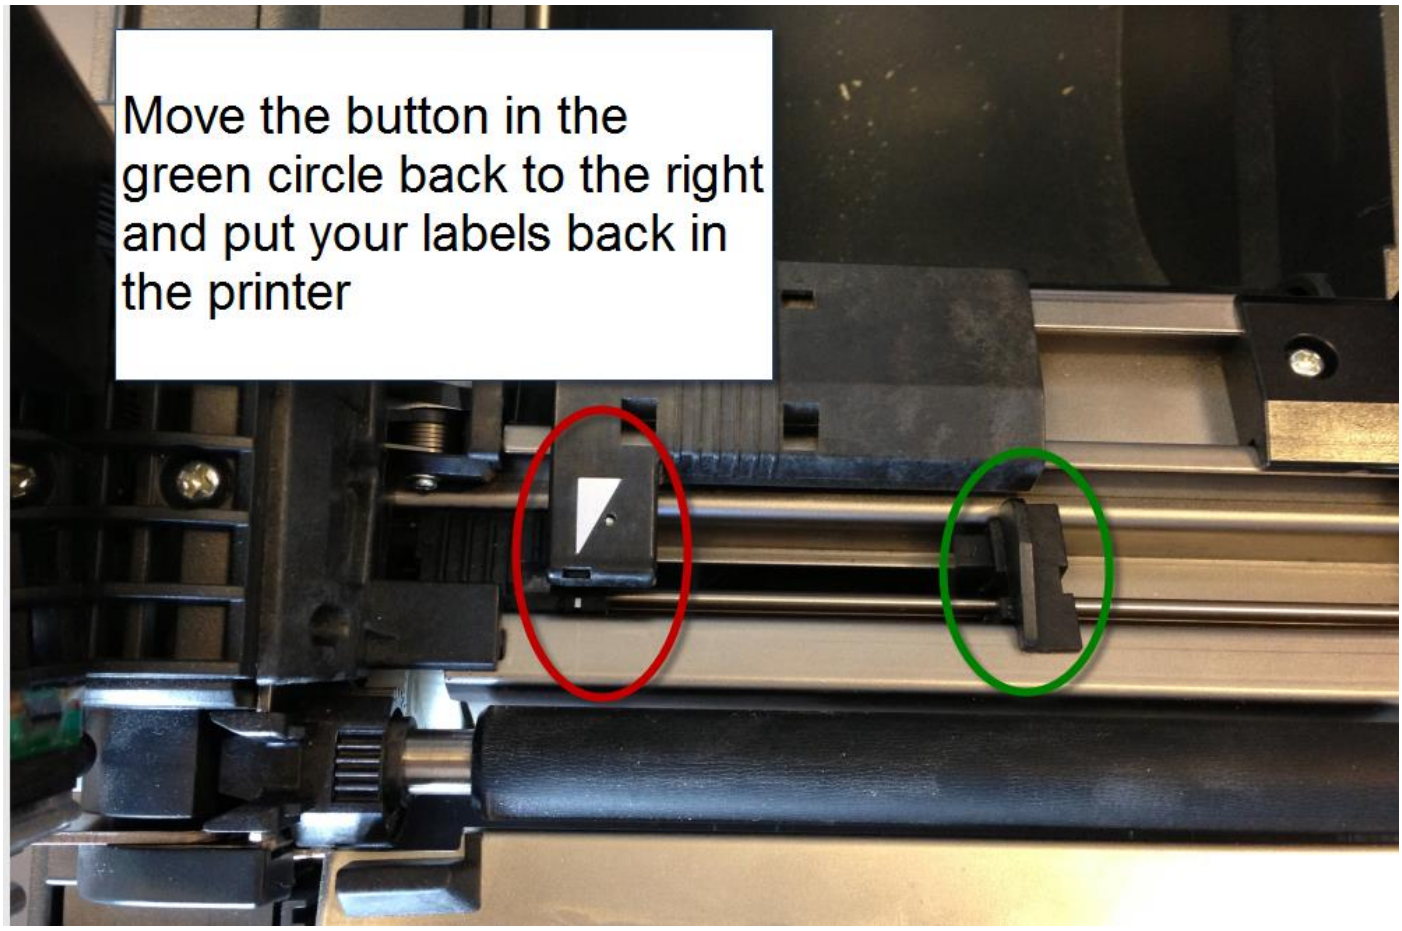
Move the button in the green circle back to the right and put your labels back in the printer